

IMPORTANT SAFETY INSTRUCTIONS

BASIC PRECAUTIONS

- Unpack and place all parts on a soft, flat surface.
- When unpacking, be careful not to pull wires with your full strength, as an incorrect connection could result.
- Only use the bulb and wattage specified below or on the label located on the socket.
- Do not attempt to replace bulb while the lamp is plugged into an electrical outlet.
- Do not use outdoors, or near water or other liquids.
- Unplug from outlet removal of any parts and clean.
- Remove cellophane cover from the shade before use.

POLARIZED PLUG

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.

ASSEMBLY INSTRUCTIONS

1. Fasten socket assembly (B) onto lamp base (A). carefully pull out excess power cord from the lamp base while assembling to prevent the cord from becoming twisted.
2. Place harp (D) onto saddle (C).
3. Place shade (E) onto harp (D) and tighten finial (F).

